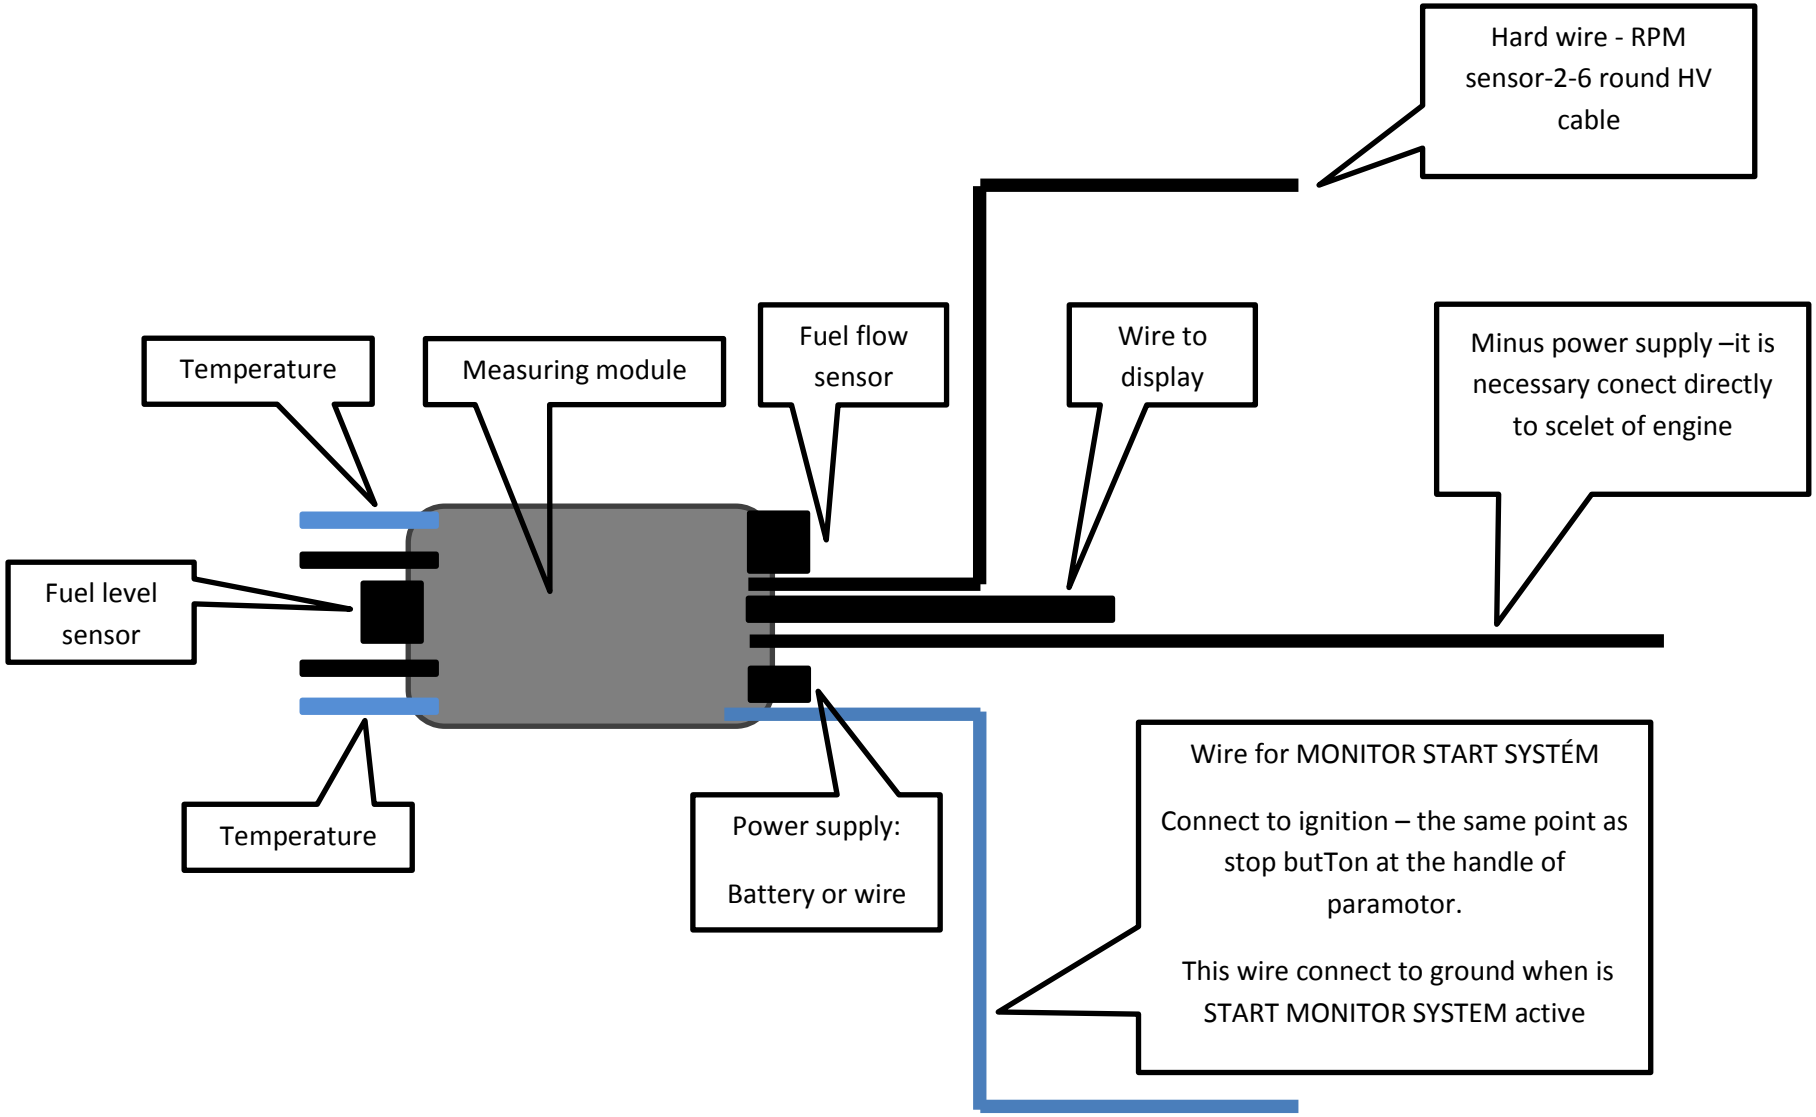
Hard wire - RPM sensor-2-6 round HV cable
Temperature
Measuring module
Fuel flow sensor
Wire to display
Minus power supply –it is necessary conect directly to scelet of engine
Fuel level sensor
Temperature
Power supply:
Battery or wire
Wire for MONITOR START SYSTÉM
Connect to ignition – the same point as stop butTon at the handle of paramotor.
This wire connect to ground when is START MONITOR SYSTEM active